


R-5926 Pin Extractor Instructions

1. Identify the pins you want to remove. You can remove either the female or male pins using the R-5926.

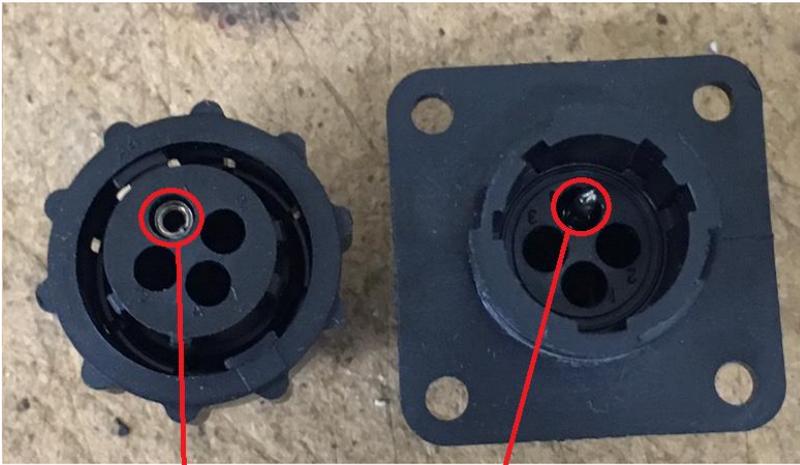

a.

Female Pin

Male Pin

2. Insert the R-5926 all the way onto the pin you want to extract until the plunger starts sticking out firmly.



a.

- b. **Note:** It will be more difficult to remove female connectors. If you are having difficulty inserting the extractor, try twisting slightly while inserting.

3. Press firmly on the plunger to remove the connector.



a.